

607/607Y PGM Men Dress Form

Assembling Guide

- (1) BASE** 1 pc.
- (2) SPRING** 1 pc.
- (3) INNER POLE** 1 pc.
- (4) OUTER POLE** 1 pc.
- (5) DRESS FORM** 1 pc.
- (6) TOPPER** 1 pc.



(1)



(3)



(4)




(2)



(5)



(6)

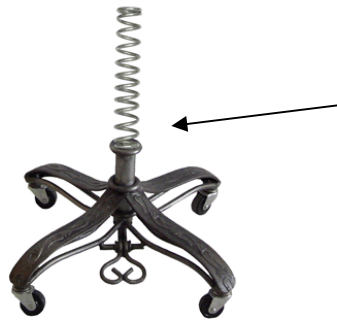

Step 2


Gently place **SPRING** on top of the **BASE**.

Step 1

Place **BASE** firmly on the ground.

Step 3

Insert **INNER POLE** into the **BASE** through **SPRING**.

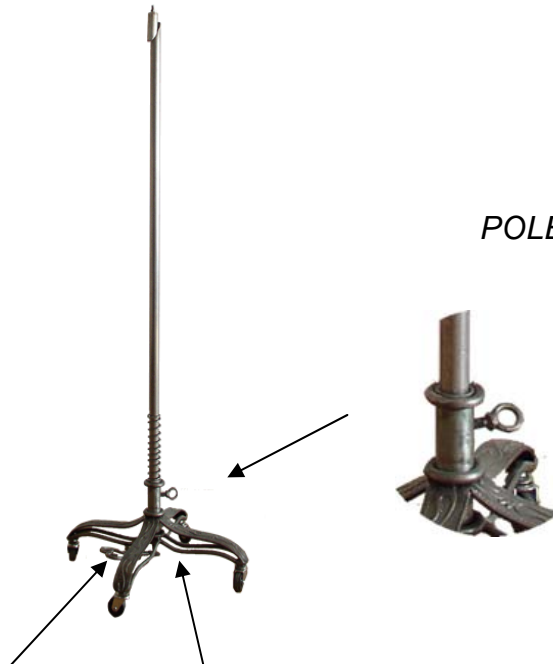

*Make sure to twist the Screw tightly after **INNER POLE** is inserted into the **BASE** Completely.*

*Make sure to have **INNER POLE** standing on the end of the foot pedal.*

Step 4

Slide OUTER POLE over INNER POLE.



The top of INNER POLE must be aligned like this while stepping down the foot pedal.

When you are sliding OUTER POLE over INNER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 5

Put the DRESS FORM over OUTER POLE.



Step 6

Twist TOPPER on the DRESS FORM.



Congratulations!!! Installation complete.