



608/608Y PGM Men Full Body Form

Assembling Guide(reference ladies fullbody)

BASE	1 pc.
SPRING	1 pc.
INNER POLE	1 pc.
OUTER POLE	1 pc.
DRESS FORM	1 pc.
PENDANT	1 pc.
TOPPER	1 pc
WATERFALL RAIL	1 pc



Base



Spring



Inner Pole



Outer Pole



Dress Form



Pendant



Topper



Waterfall Rail



Stretcher



Step 1


Place BASE firmly on the ground.



Step 2

Insert INNER POLE into the BASE.

(2) Then twist the eye-bol very tightly after INNERPOLE is inserted into the BASE completely. Please use a screw driver or any other tool to insert through righ of eye-bolt, then turn it as hard as you can. Human hands won't do it.

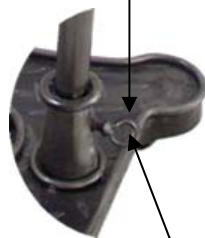


Eye-Bolt

(1) Make Sure to have INNER POLE fully standing on the end of the foot pedal.




Step 3

Gently slide in the SPRING to the INNER POLE.

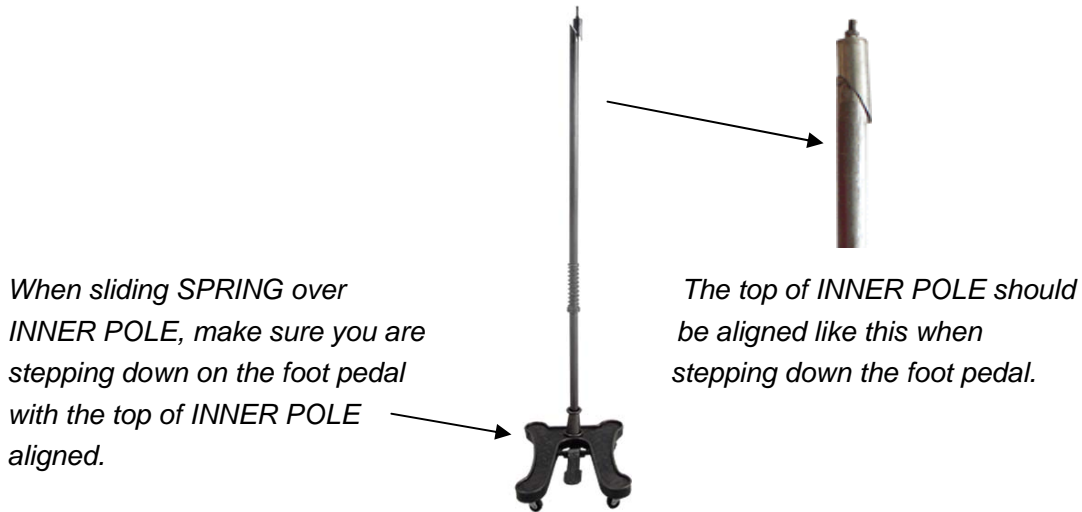

Step 4

Slide OUTER POLE over INNER POLE.

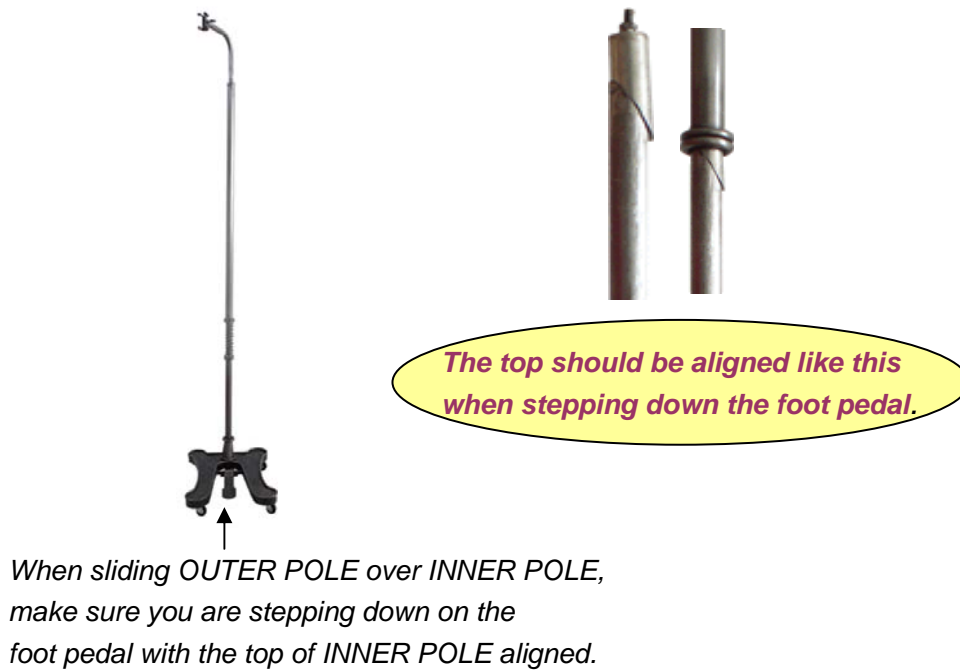

Step 5

Twist the PENDANT into the DRESS FORM, along with TOPPER.



Step 6

**Hang the DRESS FORM to the OUTER POLE.
Twist the screw tightly.**



Make sure to twist the screw tightly after hanging up the DRESS FORM



This stretcher allows you stretch in & out to have enough space hanging large form.



This waterfall rail allows you to hang your pattern making materials, measurement tape, etc.



Congratulations!! Installation Complete.