



612L PGM Large Women Fullbody Form

Assembling Guide

- | | |
|----------------|-------|
| (1) BASE | 1 pc. |
| (2) SPRING | 1 pc. |
| (3) INNER POLE | 1 pc. |
| (4) OUTER POLE | 1 pc. |
| (5) DRESS FORM | 1 pc. |
| (6) PENDANT | 1 pc. |
| (7) TOPPER | 1 pc. |



(1)



(2)



(6)



(7)



(3)



(4)



(5)



Step 1

Place **BASE** firmly on the ground.



Step 2

Insert **INNER POLE** into the **BASE**.


*Make sure to twist the screw tightly
After INNER POLE is inserted into
the BASE completely.*

*Make sure to have
INNER POLE standing on the
end of the foot pedal*



Step 3

Gently slide in the **SPRING**
to the **INNER POLE**.

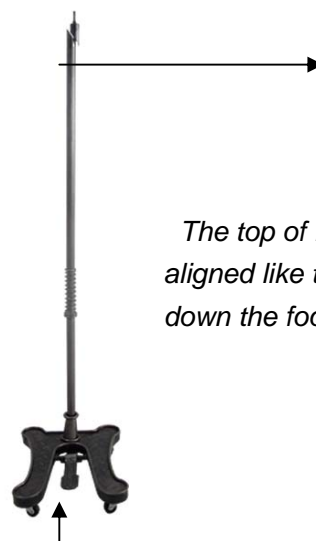

*The top of INNER POLE should be
aligned like this when stepping
down the foot pedal.*

When sliding SPRING over INNER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 4

Slide OUTER POLE over INNER POLE.



The top should be aligned like this when stepping down the foot pedal.

When sliding OUTER POLE over INNER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 5

Twist the PENDANT into the DRESS FORM, along with TOPPER.



Step 6

**Hang the DRESS FORM to the OUTER POLE
Twist the screw tightly.**



Make sure to twist the screw tightly after hanging up the DRESS FORM

Congratulations ! Installation Complete.