

**901A/901B Metal Body Form  
Assembling Guide**

- (1) BASE** 1 pc.
- (2) SPRING** 1 pc.
- (3) INNER POLE** 1 pc.
- (4) OUTER POLE** 1 pc.
- (5) METAL FORM** 1 pc.
- (6) TOPPER** 1 pc.



**(3)**



**(4)**



**(5)**




**(1)**



**(2)**



**(6)**

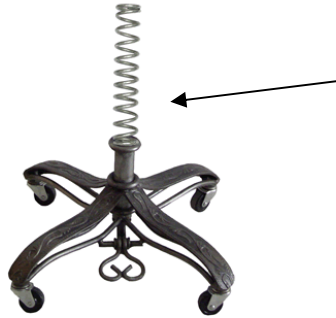

**Step 2**


Gently place **SPRING** on top of the **BASE**.

**Step 1**

Place **BASE** firmly on the ground.

**Step 3**

Insert **INNER POLE** into the **BASE** through **SPRING**.

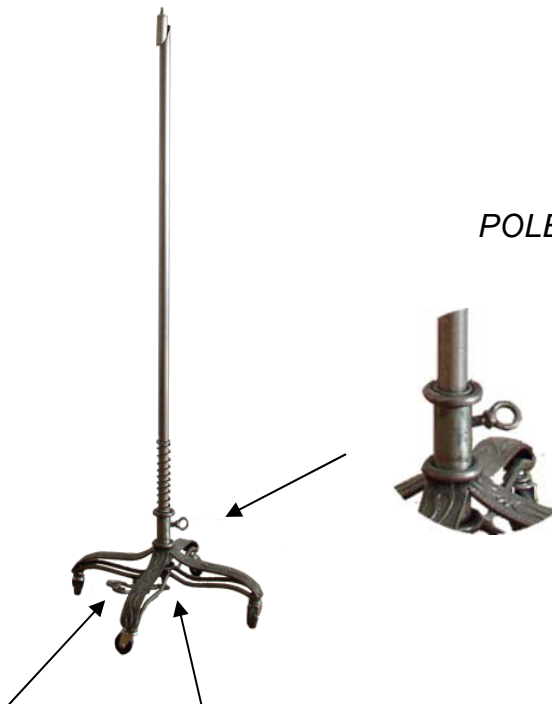

*Make sure to twist the Screw tightly after **INNER POLE** is inserted into the **BASE** Completely.*

*Make sure to have **INNER POLE** standing on the end of the foot pedal.*

**Step 4**

**Slide OUTER POLE over INNER POLE.**



*The top of INNER POLE must be aligned like this while stepping down the foot pedal.*

*When you are sliding OUTER POLE over INNER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.*

**Step 5**

**Put the DRESS FORM over OUTER POLE.**



**Step 6**

**Twist TOPPER on the DRESS FORM.**



**Congratulations!!! Installation complete.**