

901D/901E Metal Body Form w Racks

Assembling Guide

- (1) BASE 1 pc.
- (2) SPRING 1 pc.
- (3) INNER POLE 1 pc.
- (4) OUTER POLE 1 pc.
- (5) SHELF-1 1 pc
- (6) SHELF-2 1 pc
- (7) METAL DISPLAY FORM 1pc
(Raw Steel-Colored)
- (8) TOPPER 1 pc



(1)



(2)



(3)

(4)



(7)



(5)



(6)



(8)



Step 2

Gently place **SPRING** on top of the **BASE**.

Step 1

Place **BASE** firmly on the ground.

Step 3

Insert **INNER POLE** into the **BASE** through **SPRING**.




*Make sure to twist the screw tightly after **INNER POLE** is inserted into the **BASE** completely.*

*Make sure to have **INNER POLE** standing on the end of the foot pedal.*

Step 4

Slide OUTER POLE over INNER POLE.

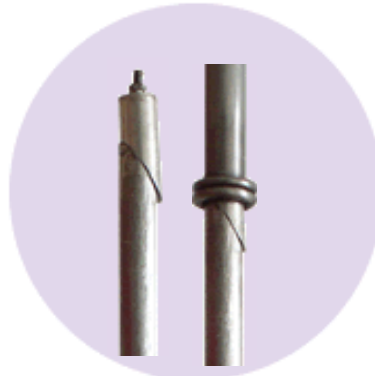

The top of INNER POLE must be aligned like this while stepping down the foot pedal.



When sliding OUTER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 5

After Step 4, you are ready to install SHELVES. Install SHELF-1 first.




Make sure to twist the screw tightly




Step 6

After Step 5, slide SHELF-2 over the OUTER POLE, and twist the screw tightly.

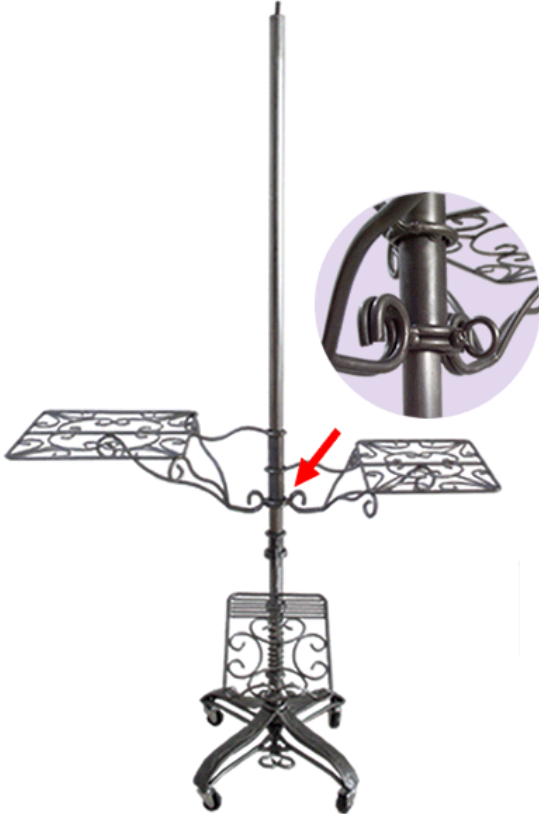


Step 7

Install Metal DISPLAY FORM over the OUTER POLE.

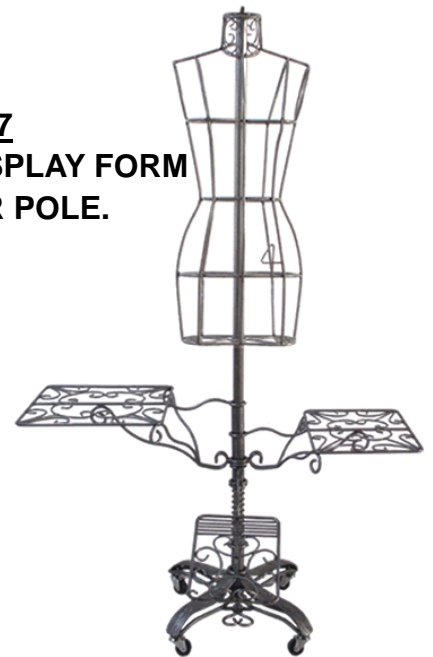

Step 8

Install TOPPER to finish the last step.

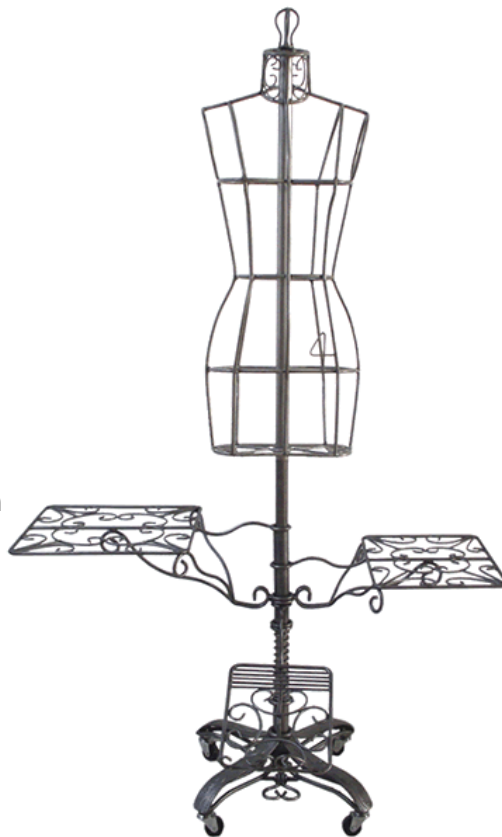

Congratulations !! Installation Complete